



WHEEL SPACER KIT INSTRUCTIONS FOR 6-5.5" & 8-6.5" WHEEL PATTERNS

Thank you for choosing Rough Country for all your suspension needs.

Professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install these wheel spacers without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Also please review tools needed list and make sure you have needed tools.

Important Note: Spacers must be periodically checked to ensure tightness.

Kit Contents:

Part #1094 2-1 1/2" Wheel Spacers (6 LUG)

 
 
Part #1095 2-2" Wheel Spacers (8LUG)

Tools Needed:


Torque Wrench
Floor Jack
Jack Stands
Grinder
Sockets
Socket wrench

Installation Instructions

1. Chock the tires and jack up the vehicle.
2. Remove the lug nuts and remove the tire and wheel. If retaining clips are present they must be removed for the spacer to sit flat on the rotor surface. **Note: Failure to remove the factory retaining clips on the wheel studs could result in a wheel /tire vibration.**
3. Trial fit the wheel spacer and check to make sure the wheel studs do not protrude out of the spacer. **See Photo 1.**
4. If the wheel studs protrude, remove the spacer and grind the end of the stud if necessary. **DO NOT** grind down to the threads. **See Photo 2.**

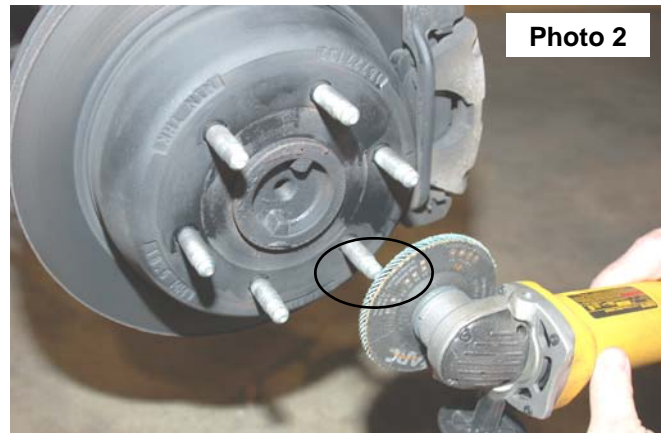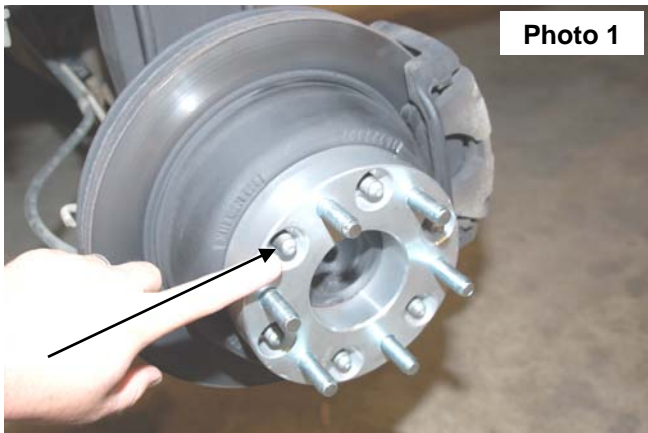

 5. Install the wheel spacers as shown with the supplied lug nuts. **See Photo 3.** Tighten to manufacturer specifications using a 19mm wrench.
6. Reinstall the tires/wheels. Tighten the lug nuts holding the wheels and tires to factory specifications.

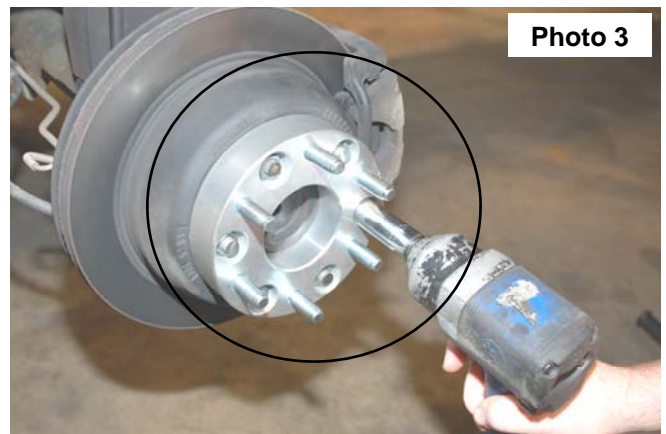

Part # 1095 2" Thick (8-6.5" PATTERN WHEEL SPACER SHOWN)



Part # 1094 1 1/2" Thick (6-5.5" PATTERN WHEEL SPACER SHOWN)



Post Installation

- **Spacers must be re-torqued periodically. Visually inspect components and re torque fasteners during routine vehicle service.**